


Your key for Predictive Maintenance

The easiest way to monitor
your engine - ACCOMOS®

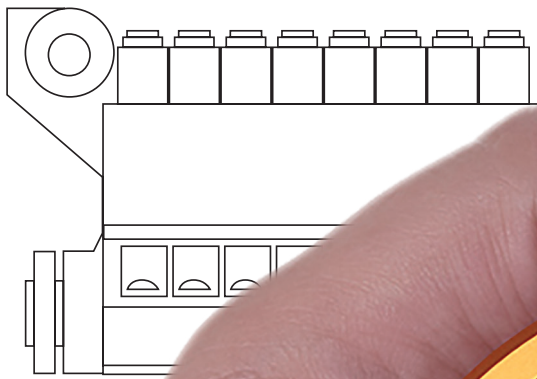

ACCOMOS®


Acceleration Monitoring System

A novel three-axis vibration sensor, which has been specifically adapted to the requirements of large engines, to support proactive maintenance.

Ideal for monitoring the permissible limit values of internal combustion engines of >100 kW (DIN ISO 10816-6, www.iso.org).

It has never been easier to install a sensor for recording vibrations: extra-strong magnets make it possible to attach the system in minutes. In most cases, it is not necessary to machine surfaces.

Regardless of whether you use ACCOMOS® as a permanently installed sensor with engines, clutches, or generators, it can detect discrepancies in the vibration behaviour and warn you before anything untoward occurs.

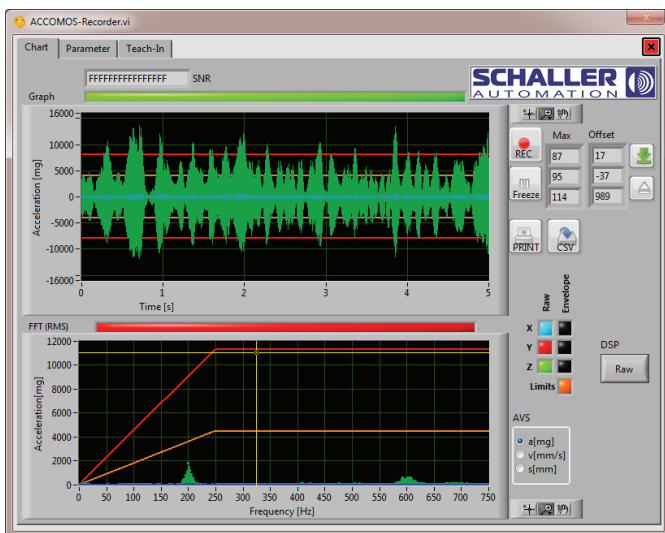

Installing a sensor allows you to monitor the engine such that the system displays (yellow/red) warning thresholds for the vibration behaviour by means of a coloured LED on the sensor.

It is possible to transfer the real time data via CAN or RS485 connections.

Optional evaluation software is available, which, amongst other things, allows you to display and save the real time data on all three axes and to display the frequency spectrum.

The software also offers a teaching function that can be used to determine the thresholds for warnings (yellow/red).


ACCOMOS®

for your Proactive Maintenance

ACCOMOS® monitors compliance with the limit values for vibrations according to DIN-ISO 10816-6 for engines of >100 kW, www.iso.org

Displacement in um (RMS)	Velocity in mm/s (RMS)	Acceleration in m/s^2 (RMS)	Machine vibration classification						
			1	2	3	4	5	6	7
17,80	1,12	1,76	Normal / acceptable	Normal / acceptable	Normal / acceptable	Normal / acceptable	Normal / acceptable	Normal / acceptable	Normal / acceptable
28,30	1,78	2,79							
44,80	2,82	4,42							
71,00	4,46	7,01	Unsatisfactory	Unsatisfactory	Unsatisfactory	Unsatisfactory	Unsatisfactory	Unsatisfactory	Normal / acceptable
113,00	7,07	11,10							
178,00	11,20	17,60							
283,00	17,80	27,90							
448,00	28,20	44,20	Unacceptable	Unacceptable	Unacceptable	Unsatisfactory	Unacceptable	Unacceptable	Normal / acceptable
710,00	44,60	70,10							
1125,00	70,70	111,00							
1784,00	112,00	176,00							

Dimensions

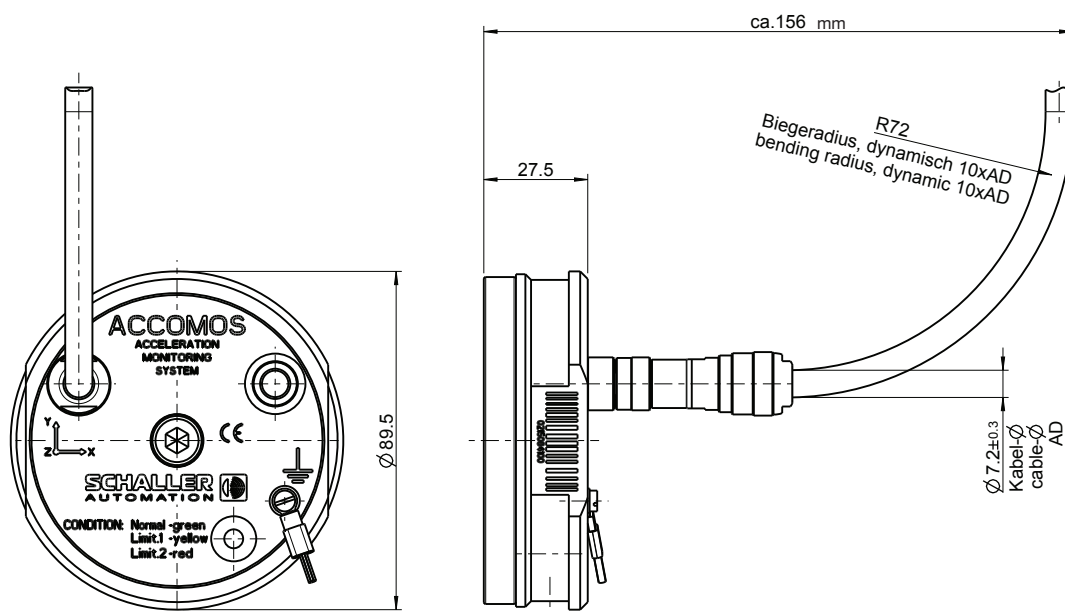

Safety for you and your engine: Worldwide!

Headquarters:

SCHALLER Automation

Industrielle Automationstechnik GmbH & Co. KG
Industriering 14
D-66440 Blieskastel
Tel.: +49 6842 508 0
Fax: +49 6842 508 260
Mail: info@schaller.de
www.schaller-automation.com

Key Account Management Center:

Singapore

Schaller Automation Pte Ltd.
114 Lavender Street
#09-93 CT Hub 2
Singapore 338729
Phone: +65 6643 5151 (24/7)
Fax: +65 6643 5150
Mail: info@schallersingapore.com



China

Schaller Automation - China
Room 401, Juyang Mansion No. 1200
Pudong Avenue,
Shanghai 200135, P.R.China
Phone: +86 - 21 - 5093 - 7566
Mobile: +86 - 1390 - 1890 - 736
Fax: +86 - 21 - 5093 - 7556
Mail: info@schallerchina.cn

USA

Schaller Automation LP
811 Shotgun Road
Sunrise, FL 33326
United States of America
Phone: +1 954 794 1950
Mobile: +1 561 289 1495
Fax: +1 954 794 1951
Mail: info@schalleramerica.com



ISO 9001/2015 certified

